




# USER MANUAL

## LARGE CAPACITY PET CYLINDER

**CY07**

 **USER MANUAL**

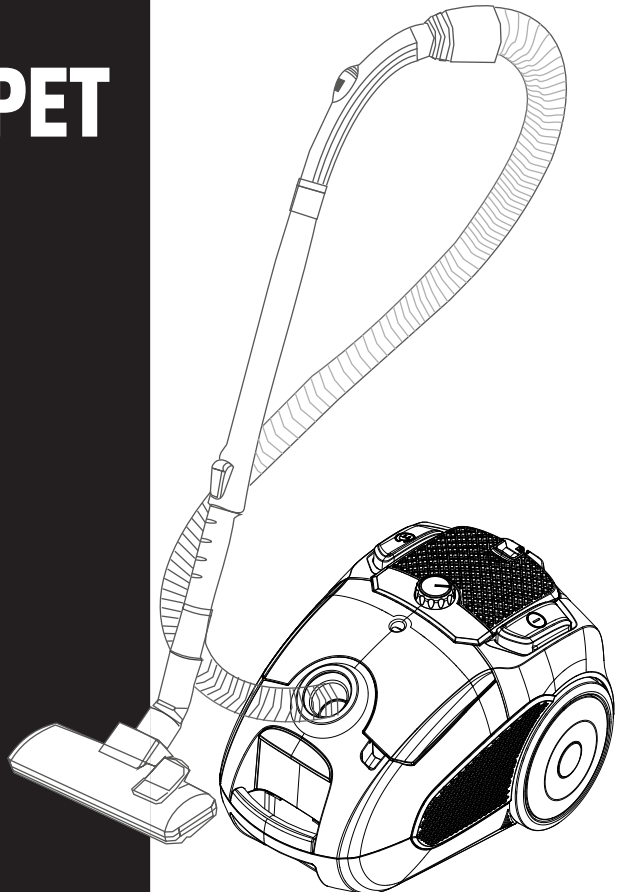

**DIRTDEVIL.CO.UK**

**0333 400 0653**

# WELCOME!

Congratulations on your purchase. Use this instruction manual to learn about your new vacuum's great features. Find out how to assemble, use and maintain your vacuum cleaner in this easy to follow manual.

## PLEASE READ CAREFULLY AND KEEP FOR FUTURE REFERENCE

If you have any questions, please email [info@dirtdevil.co.uk](mailto:info@dirtdevil.co.uk) to get in contact.

# CONTENTS

---

<b>Safety instructions</b> .....	<b>3</b>
<b>Getting to know your Dirt Devil vacuum cleaner</b> .....	<b>7</b>
<b>Assembling your vacuum cleaner</b> .....	<b>8</b>
<b>Using your vacuum cleaner</b> .....	<b>9</b>
<b>Maintaining your vacuum cleaner</b> .....	<b>10</b>
Changing the dust bag	
Cleaning the HEPA pre-motor filter	
Cleaning the outer body	
Cleaning the HEPA post-motor filter	
Carriage and storage	
<b>Troubleshooting</b> .....	<b>16</b>
<b>Specification</b> .....	<b>17</b>
<b>Parts list and contact details</b> .....	<b>20</b>

# IMPORTANT SAFETY INSTRUCTIONS

## FOR INDOOR USE ONLY

---

### **WARNING**

When using an electrical appliance, basic precautions should always be followed, including the following:

### **READ ALL INSTRUCTIONS BEFORE USING THIS APPLIANCE**

Failure to follow the warnings and instructions may result in electric shock, fire and/or serious injury.

## **TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK, OR INJURY:**

### **USING THE VACUUM CLEANER**

- **DO NOT** use the vacuum cleaner outdoors. For household use only. Store indoors.
- **DO NOT** vacuum up hard or sharp objects such as glass, nails, screws or coins that could damage the vacuum cleaner.
- **DO NOT** vacuum liquids, use on wet surfaces or immerse in water as this could cause damage to the vacuum cleaner.
- **DO NOT** vacuum anything flammable, burning or smoking such as cigarette ends, matchsticks or ashes.
- **DO NOT** use the vacuum cleaner to clean your pets or any animal.
- Keep the vacuum cleaner moving over the carpet surface at all times to avoid damaging the carpet fibres.
- Keep the vacuum cleaner and accessories away from hot surfaces like hobs, cookers or microwave ovens.
- Always unplug the vacuum cleaner immediately if it malfunctions.
- **DO NOT** use this vacuum cleaner if it has been dropped, damaged, left outdoors, submerged in water or is not working as it should.
- **DO NOT** use the vacuum cleaner in an enclosed space filled with explosive, toxic or flammable vapours.

# IMPORTANT SAFETY INSTRUCTIONS

## FOR INDOOR USE ONLY

---

### PLUG AND CORD

- **DO NOT** use with a damaged cord or plug.
- **DO NOT** pick up or pull the vacuum cleaner by the cord.
- Take care that the cord is not kinked, pinched, pulled around sharp corners or run over.
- Ensure the cord does not come into contact with heat sources or become a trip hazard.
- When unplugging the vacuum cleaner from the wall socket, pull by the plug, not the cord, holding the socket with your other hand.

### AIRFLOW, FILTERS AND ATTACHMENTS

- **DO NOT** use without filters and bag in place.
- Always turn off and unplug the vacuum cleaner before changing filters or attachments.
- If when using, suction appears to be reduced, turn off and unplug the vacuum cleaner and clean all of the filters.
- **DO NOT** use if the airflow is restricted. If the air paths or the floor nozzle become

blocked, turn off and unplug the vacuum cleaner. Clear all obstructions before powering on again.

- Use genuine Dirt Devil filters and attachments only. Using non-genuine accessories may cause damage to the vacuum cleaner.
- When cleaning filters, ensure that they are completely dry and undamaged before replacing them back into the vacuum cleaner.

### PERSONAL SAFETY

- This machine is not intended to be used or cleaned by persons with reduced physical, sensory or mental capabilities, or lack of experience or knowledge, unless they have been given instructions concerning the machine by a person legally responsible for their safety. They should be supervised whilst using the machine. Children shall not use, clean or play with this machine, which when not in use should be secured out of their reach. Keep the vacuum cleaner out of reach of children.

# IMPORTANT SAFETY INSTRUCTIONS

## FOR INDOOR USE ONLY

---

- Packing material must not be used for playing. There is a danger of suffocation.
- Never leave the vacuum cleaner connected to the mains without supervision.
- Keep the floor nozzle away from hair, face, fingers, uncovered feet or loose clothing when the vacuum cleaner is working or plugged in.
- **DO NOT** use with wet hands.

### **USER MANUAL GUIDANCE**

- Keep this user manual in a safe place.
- Failure to comply with this user manual can lead to serious injuries or damage to the vacuum cleaner. We take no responsibility for damage due to failure to comply with this user manual.

# WHAT TO EXPECT FROM YOUR USER MANUAL

---

Your user manual contains lots of handy information about your Dirt Devil appliance. Please have a read and keep it somewhere safe for future reference. Here's what you can expect from the different user manual sections.

## GETTING TO KNOW YOUR DIRT DEVIL APPLIANCE



The diagrams of your appliance on this page allow you to familiarise yourself with your machine. Doing so will make the information in the rest of the user manual clearer and help you to source the right replacement spare parts or accessories.

## ASSEMBLING YOUR APPLIANCE



When you first take your appliance out of its box, there will be some simple setup required to get it ready to use. The information in this section tells you the steps you need to take before using your new machine for the first time.

## USING YOUR APPLIANCE



It's important to use your machine correctly to avoid any damage to either the appliance itself or your floors. Get to know features, settings and the dos and don'ts of using your machine so it's cleaning to its maximum potential.

## MAINTAINING YOUR APPLIANCE



Every appliance needs a bit of routine maintenance from time to time. Learning how to recognise the different parts of your machine to maintain and how to look after them will enable your appliance to last longer.

## TROUBLESHOOTING



If you encounter any issues with your appliance, the troubleshooting section in this user manual is the first place you can turn. Here you will find information about potential problems as well as the solutions to resolve them.

## SPECIFICATION



 
If you want to know any of the specifics about your machine including model number, weight, capacity and input voltage, head over to the specification page in this user manual for a full list.

## PARTS LIST AND CONTACT DETAILS

Need a replacement part for your machine? The list on this page shows you all of the spare parts available for your model. You'll also find our full contact information here in case you need to get in touch for any reason.

# GETTING TO KNOW YOUR VACUUM CLEANER

## FEATURES

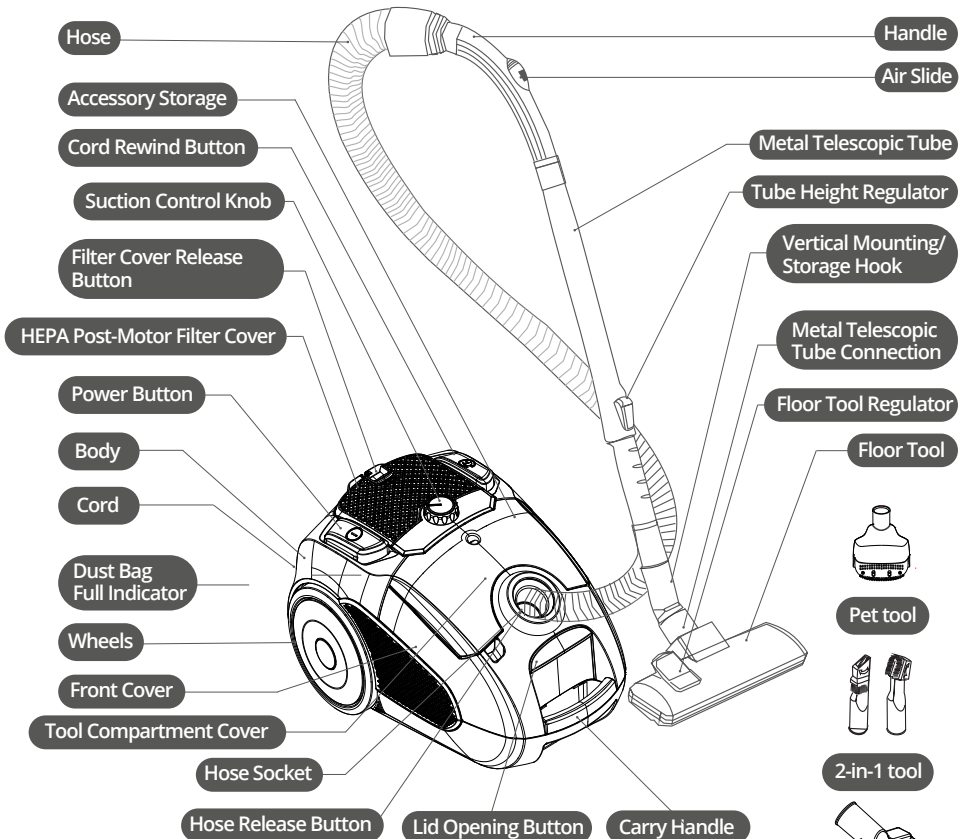

### SPARE PARTS

Visit [dirtdevil.co.uk](http://dirtdevil.co.uk) to order

#### Hose (black)

Part no. DVLS00054

#### Floor tool

Part no. DVLS00052

#### Metal telescopic tube

Part no. DVLS00053

#### 2-in-1 tool

Part no. DVLS00058

#### Pet tool

Part no. DVLS00063

#### Synthetic bag (x5)

Part no. DVLS00066

#### Upholstery tool

Part no. DVLS00070

#### HEPA pre-motor filter

Part no. DVLS00074

#### HEPA post-motor filter

Part no. DVLS00075



Upholstery Tool



Synthetic Dust Bag

# ASSEMBLING YOUR VACUUM CLEANER


## ASSEMBLING YOUR VACUUM CLEANER

Before assembling or disassembling attachments, ensure the cylinder vacuum cleaner is not plugged into the mains supply and is switched off.


1. Attach the hose to the main body of the vacuum cleaner by sliding the hose connection into the hose socket until you hear a click. To release the hose, press the hose release button and pull it outwards.
2. Put the metal telescopic tube on the other end of the hose.
3. Adjust the metal telescopic tube to the desired height by pressing the tube height regulator downwards and by pulling the lower part to the desired height. When storing the vacuum cleaner adjust the metal telescopic tube to the lowest possible position.
4. Place the desired accessory on the metal telescopic tube.

The floor tool can be used on either hard floors or carpets. For hard floors e.g. wood or tiles press the floor tool regulator to lower the brushes. For carpets, press the floor tool regulator to raise the brushes.

 
1

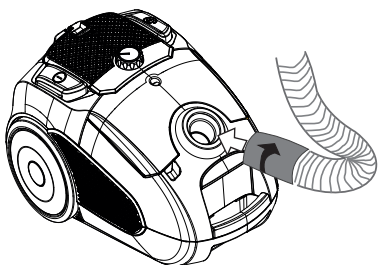


2

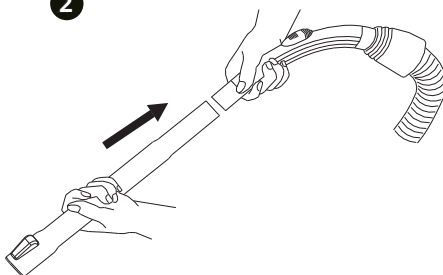 

3

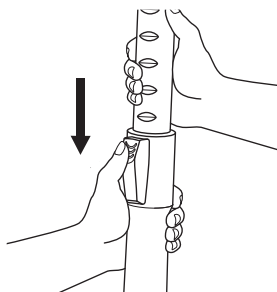 

4

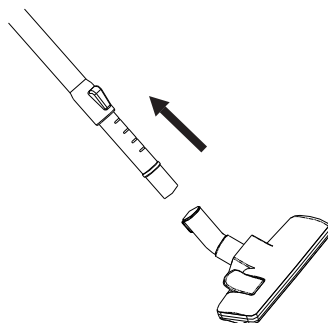 



# USING YOUR VACUUM CLEANER

## USING YOUR VACUUM CLEANER

### CAUTION

Do not use the vacuum cleaner without placing the bag and filter in the correct position!

Assemble the vacuum cleaner (see “Assembling the vacuum cleaner”).

1. Pull the cord to the desired length and plug it into the socket.

**CAUTION:** Make sure you do not exceed the yellow mark on the cord which indicates the maximum length of the cord.

2. Press the power button to start the vacuum.

 
3. Set the desired appliance power with the suction control knob.

4. When you have finished cleaning, press the power button again.

5. Disconnect the appliance from the wall socket.

6. To wind the cord, push the cord rewind button with one hand and guide the cord with the other hand to make sure that it does not get damaged or tangled as it wraps.


1

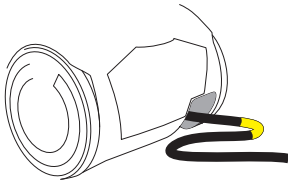

2



 
3

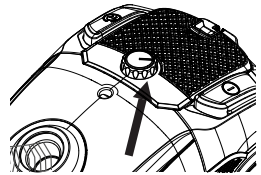


4



 5



6

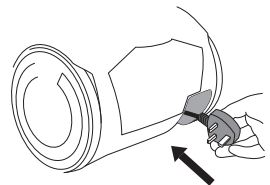 

# MAINTAINING YOUR VACUUM CLEANER

---

## CHANGING THE DUST BAG

### **CAUTION**

Do not use the vacuum cleaner without placing the dust bag and filter in the correct position!

To maintain the maximum performance of the vacuum cleaner, frequently change the dust bag and clean the filter whenever necessary. If you use the appliance to collect ash, sand, cement powder or the like, it is possible to clog the dust bag's pores. The dust bag full indicator will turn red. Change the dust bag even if it is not full.

 
### **WHEN THE DUST BAG FULL INDICATOR TURNS RED:**

1. Unplug the power cord from the plug socket.
2. Remove the hose from the hose socket.
3. Open the front cover by pressing the lid opening button. Remove the bag from its position.
4. Insert the new bag into the slot.
5. Close the cover until a click is heard.


# MAINTAINING YOUR VACUUM CLEANER

## CHANGING THE DUST BAG


1




2

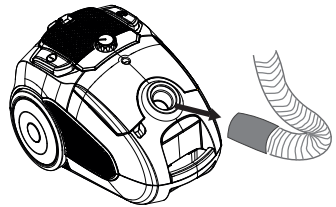 


3

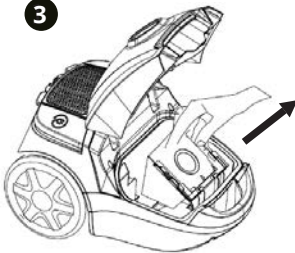 

4

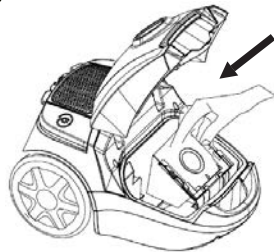 

5

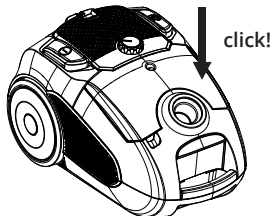 

# MAINTAINING YOUR VACUUM CLEANER

## CLEANING THE HEPA PRE-MOTOR FILTER

### CAUTION

 
Do not use the vacuum cleaner without placing the bag and filter in the correct position!

1. Unplug the power cord from the plug socket.
2. Remove the hose from the hose socket, open the front cover by pressing the lid opening button and remove the filter.
3. Rinse the filter with warm water and allow it to air dry for at least 24 hours. Do not use a hairdryer or other heating appliance to dry the filter.
4. Once completely dry, replace the filter.


Always use the vacuum cleaner with a filter in place. Failure to install the filter may result in motor damage. Make sure it is correctly inserted before using the vacuum cleaner again.

It is recommended that you only use original Dirt Devil filters for your vacuum cleaner.


1




2

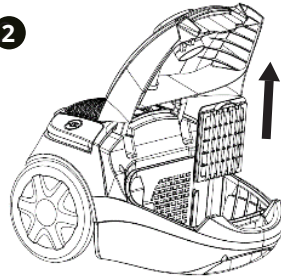 

3

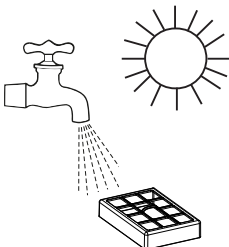 

4

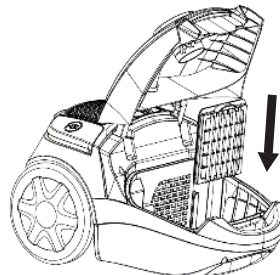 

# MAINTAINING YOUR VACUUM CLEANER

 
---

## CLEANING THE OUTER BODY

### CAUTION

Always turn off and unplug the vacuum cleaner for cleaning or maintenance. Do not use strong or abrasive products for cleaning the outer surface of the vacuum cleaner.

1. Clean the surface of the vacuum cleaner and its accessories with a fresh and soft cloth.
2. Do not place any of the parts of the appliance in the dishwasher.

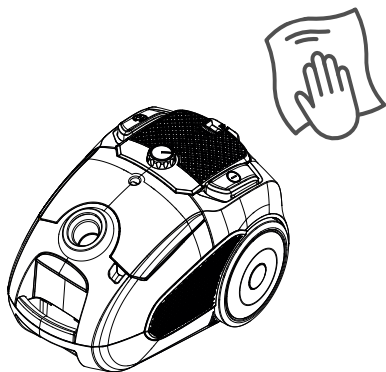

# MAINTAINING YOUR VACUUM CLEANER

 
## CLEANING THE HEPA POST-MOTOR FILTER

### CAUTION


Do not use the vacuum cleaner without the HEPA post-motor filter in the correct position!

1. Unplug the power cord from the plug socket.
2. Remove the HEPA post-motor filter cover by pressing the air exhaust filter cover release button.
3. Remove the filter.
4. Rinse the filter with cold water and allow it to dry completely.
5. Replace the filter. Make sure it is correctly inserted before using the vacuum cleaner again.

1




2

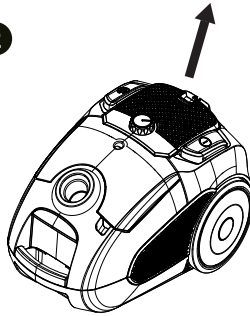 


3



 4

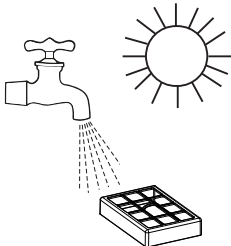






5

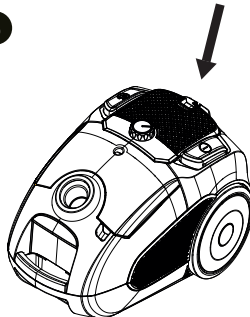 

# MAINTAINING YOUR VACUUM CLEANER

## CARRIAGE AND STORAGE

     1. You can lift and carry the vacuum cleaner using the carry handle. Never pull or lift the vacuum cleaner using the cord.
2. Before storing the vacuum cleaner, turn it off.
3. Unplug the vacuum cleaner from the socket.
4. Rewind the cord by pressing the automatic cord rewind button.
5. For space-saving, the vacuum cleaner can be stored in an upright position.

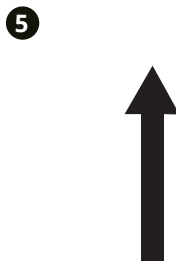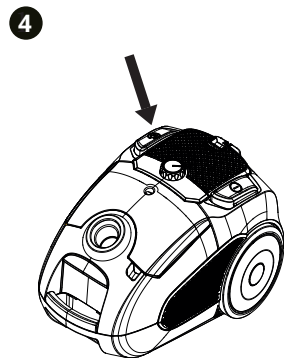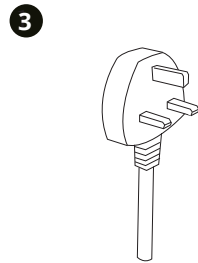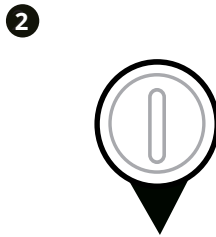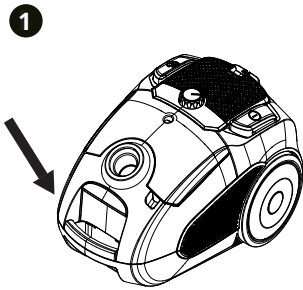

# TROUBLESHOOTING

## WARNING

To reduce the risk of shock and unintended operation, turn off power and unplug from the mains before servicing.

Problem	Possible Issue	Solution
Loss of suction	Dust bag full	Change the dust bag. See “Changing the dust bag” section for more information.
Loss of suction	Dirty filters or blockage	<ol style="list-style-type: none"><li>1. Replace the dust bag and clean the filters. See “Cleaning the HEPA pre-motor filter” and “Cleaning the HEPA post-motor filter” sections for more information.</li><li>2. Check for blockages in the floor tool, hose, metal telescopic tube and connectors.</li><li>3. Remove any blockages before restarting the vacuum cleaner.</li></ol>

## CONTACT US

In any other case or if the solution explained above did not solve the problem, please contact us at [info@dirdevil.co.uk](mailto:info@dirdevil.co.uk)

## DISPOSAL

Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your local authority for recycling advice.

## UNBOXING

During transportation, packaging was used to protect the appliance against any damage. After unboxing, please dispose of all packaging in a way that will not cause damage to the environment.

**IMPORTANT!** During unpacking, keep the packaging material (polyethylene bags, polystyrene pieces, etc.) out of reach of children.



# SPECIFICATION

---

Model	CY07
Power	700W
Capacity	3.5L
Weight	5kg
Hose length	1.5m
Cord length	5m
Sound	72dB
Dimensions (LxWxH)	48 x 29 x 27cm
Filter type	HEPA
Input voltage	220-240V
Current	50Hz

**WARNING:** The above data has been supplied by the manufacturing plant and tested in laboratory conditions. The actual situation may vary according to the use environment.

**This appliance complies with the following UK & European Directives:**

Electrical Equipment (Safety) Regulations 2016

Electromagnetic Compatibility Regulations 2016

Low Voltage Directive (LVD) 2014/35/EU

Electromagnetic Compatibility Directive (EMCD) 2014/30/EU









## SPARE PARTS



Replacement parts below are available for your appliance model.  
Please visit [dirtdevil.co.uk](http://dirtdevil.co.uk) to place your order.

### Hose (black)

- Part no. DVLS00054

### Floor tool

- Part no. DVLS00052

### Metal telescopic tube

- Part no. DVLS00053

### 2-in-1 tool

- Part no. DVLS00058

### Pet tool

- Part no. DVLS00063

### Cord with plug

- Part no. DVLS00065

### Synthetic bag (x5)

- Part no. DVLS00066

### Bag holder

- Part no. DVLS00067

### Tool compartment cover

- Part no. DVLS00068

### Upholstery tool

- Part no. DVLS00070

### Bag full indicator

- Part no. DVLS00071

### Wheels (pair)

- Part no. DVLS00072

### Front wheel

- Part no. DVLS00073

### HEPA pre-motor filter

- Part no. DVLS00074

### HEPA post-motor filter

- Part no. DVLS00075

### Filter holder

- Part no. DVLS00076

## VISIT DIRT DEVIL WEBSITE

[www.dirtdevil.co.uk](http://www.dirtdevil.co.uk)

## CONTACT US

0333 400 0653

[info@dirtdevil.co.uk](mailto:info@dirtdevil.co.uk)

Connect House,  
Small Heath Business Park, Talbot Way,  
Small Heath, Birmingham,  
B10 0HJ  
United Kingdom

**This appliance has a 1-year warranty as standard. To extend your warranty for 1 additional year, please visit [dirtdevil.co.uk](http://dirtdevil.co.uk) and register your appliance.**

Pictures are for illustration purposes only and may differ from the actual product. We are constantly striving to improve our products and the specifications contained herein are subject to change without notice. Made in China. DIRT DEVIL is a registered trademark of Techtronic Cordless GP and is used under licence by Connect Distribution Services Ltd.

Dirt Devil shall not be held liable for any damage caused by improper use of the product.