




USER MANUAL

ULTRA LIGHTWEIGHT COMPACT CYLINDER

CY08

 USER MANUAL

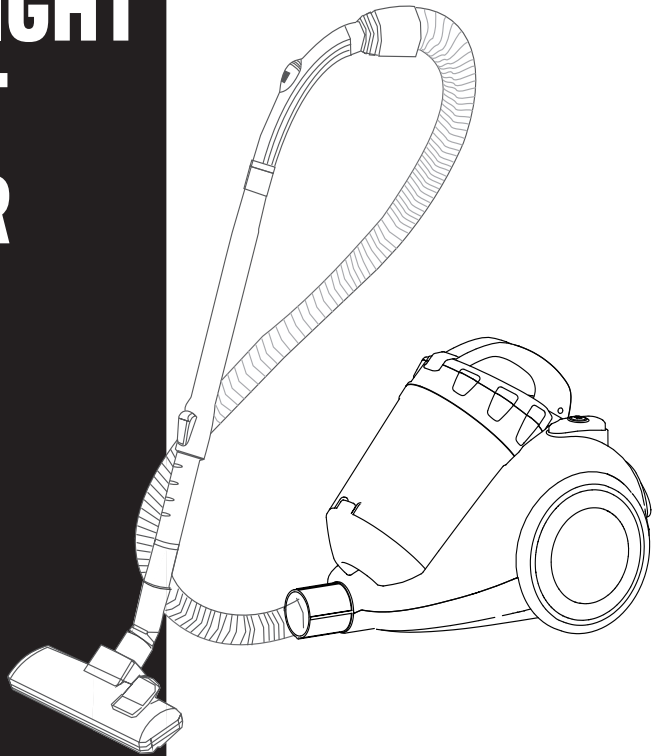

DIRTDEVIL.CO.UK

0333 400 0653

WELCOME!

Congratulations on your purchase. Use this instruction manual to learn about your new vacuum's great features. Find out how to assemble, use and maintain your vacuum cleaner in this easy to follow manual.

PLEASE READ CAREFULLY AND KEEP FOR FUTURE REFERENCE

If you have any questions, please email info@dirtydevil.co.uk to get in contact.

CONTENTS

Safety instructions	3
Getting to know your Dirt Devil vacuum cleaner	7
Assembling your vacuum cleaner	8
Using your vacuum cleaner	9
Maintaining your vacuum cleaner	10
Cleaning the dust bin	
Removing the HEPA pre-motor filter	
Removing the HEPA post-motor filter	
Cleaning the HEPA pre-motor and post-motor filters	
Removing obstructions	
Troubleshooting	12
Specification	13
Parts list and contact details	16

IMPORTANT SAFETY INSTRUCTIONS

FOR INDOOR USE ONLY

WARNING

When using an electrical appliance, basic precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING THIS APPLIANCE

Failure to follow the warnings and instructions may result in electric shock, fire and/or serious injury.

TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK, OR INJURY:

USING THE VACUUM CLEANER

- **DO NOT** use the vacuum cleaner outdoors. For household use only. Store indoors.
- **DO NOT** vacuum up hard or sharp objects such as glass, nails, screws or coins that could damage the vacuum cleaner.
- **DO NOT** vacuum liquids, use on wet surfaces or immerse in water as this could cause damage to the vacuum cleaner.
- **DO NOT** vacuum anything flammable, burning or smoking such as cigarette ends, matchsticks or ashes.
- **DO NOT** use the vacuum cleaner to clean your pets or any animal.
- Keep the vacuum cleaner moving over the carpet surface at all times to avoid damaging the carpet fibres.
- Keep the vacuum cleaner and accessories away from hot surfaces like hobs, cookers or microwave ovens.
- Always unplug the vacuum cleaner immediately if it malfunctions.
- **DO NOT** use this vacuum cleaner if it has been dropped, damaged, left outdoors, submerged in water or is not working as it should.
- **DO NOT** use the vacuum cleaner in an enclosed space filled with explosive, toxic or flammable vapours.

IMPORTANT SAFETY INSTRUCTIONS

FOR INDOOR USE ONLY

PLUG AND CORD

- **DO NOT** use with a damaged cord or plug.
- **DO NOT** pick up or pull the vacuum cleaner by the cord.
- Take care that the cord is not kinked, pinched, pulled around sharp corners or run over.
- Ensure the cord does not come into contact with heat sources or become a trip hazard.
- When unplugging the vacuum cleaner from the wall socket, pull by the plug, not the cord, holding the socket with your other hand.

AIRFLOW, FILTERS AND ATTACHMENTS

- **DO NOT** use without filters and bin in place.
- Always turn off and unplug the vacuum cleaner before changing filters or attachments.
- If when using, suction appears to be reduced, turn off and unplug the vacuum cleaner and clean all of the filters.
- **DO NOT** use if the airflow is restricted. If the air paths or the floor nozzle become

blocked, turn off and unplug the vacuum cleaner. Clear all obstructions before powering on again.

- Use genuine Dirt Devil filters and attachments only. Using non-genuine accessories may cause damage to the vacuum cleaner.
- When cleaning filters, ensure that they are completely dry and undamaged before replacing them back into the vacuum cleaner.

PERSONAL SAFETY

- This machine is not intended to be used or cleaned by persons with reduced physical, sensory or mental capabilities, or lack of experience or knowledge, unless they have been given instructions concerning the machine by a person legally responsible for their safety. They should be supervised whilst using the machine. Children shall not use, clean or play with this machine, which when not in use should be secured out of their reach. Keep the vacuum cleaner out of reach of children.

IMPORTANT SAFETY INSTRUCTIONS

FOR INDOOR USE ONLY

- Packing material must not be used for playing. There is a danger of suffocation.
- Never leave the vacuum cleaner connected to the mains without supervision.
- Keep the floor nozzle away from hair, face, fingers, uncovered feet or loose clothing when the vacuum cleaner is working or plugged in.
- **DO NOT** use with wet hands.

USER MANUAL GUIDANCE

- Keep this user manual in a safe place.
- Failure to comply with this user manual can lead to serious injuries or damage to the vacuum cleaner. We take no responsibility for damage due to failure to comply with this user manual.

WARNING

Hold the plug when rewinding the cord. Do not allow the cord to whip when rewinding.

WHAT TO EXPECT FROM YOUR USER MANUAL

Your user manual contains lots of handy information about your Dirt Devil appliance. Please have a read and keep it somewhere safe for future reference. Here's what you can expect from the different user manual sections.

GETTING TO KNOW YOUR DIRT DEVIL APPLIANCE



The diagrams of your appliance on this page allow you to familiarise yourself with your machine. Doing so will make the information in the rest of the user manual clearer and help you to source the right replacement spare parts or accessories.

ASSEMBLING YOUR APPLIANCE



When you first take your appliance out of its box, there will be some simple setup required to get it ready to use. The information in this section tells you the steps you need to take before using your new machine for the first time.

USING YOUR APPLIANCE



It's important to use your machine correctly to avoid any damage to either the appliance itself or your floors. Get to know features, settings and the dos and don'ts of using your machine so it's cleaning to its maximum potential.

MAINTAINING YOUR APPLIANCE



Every appliance needs a bit of routine maintenance from time to time. Learning how to recognise the different parts of your machine to maintain and how to look after them will enable your appliance to last longer.

TROUBLESHOOTING



If you encounter any issues with your appliance, the troubleshooting section in this user manual is the first place you can turn. Here you will find information about potential problems as well as the solutions to resolve them.

SPECIFICATION



If you want to know any of the specifics about your machine including model number, weight, capacity and input voltage, head over to the specification page in this user manual for a full list.

 
PARTS LIST AND CONTACT DETAILS



Need a replacement part for your machine? The list on this page shows you all of the spare parts available for your model. You'll also find our full contact information here in case you need to get in touch for any reason.

GETTING TO KNOW YOUR VACUUM CLEANER

FEATURES

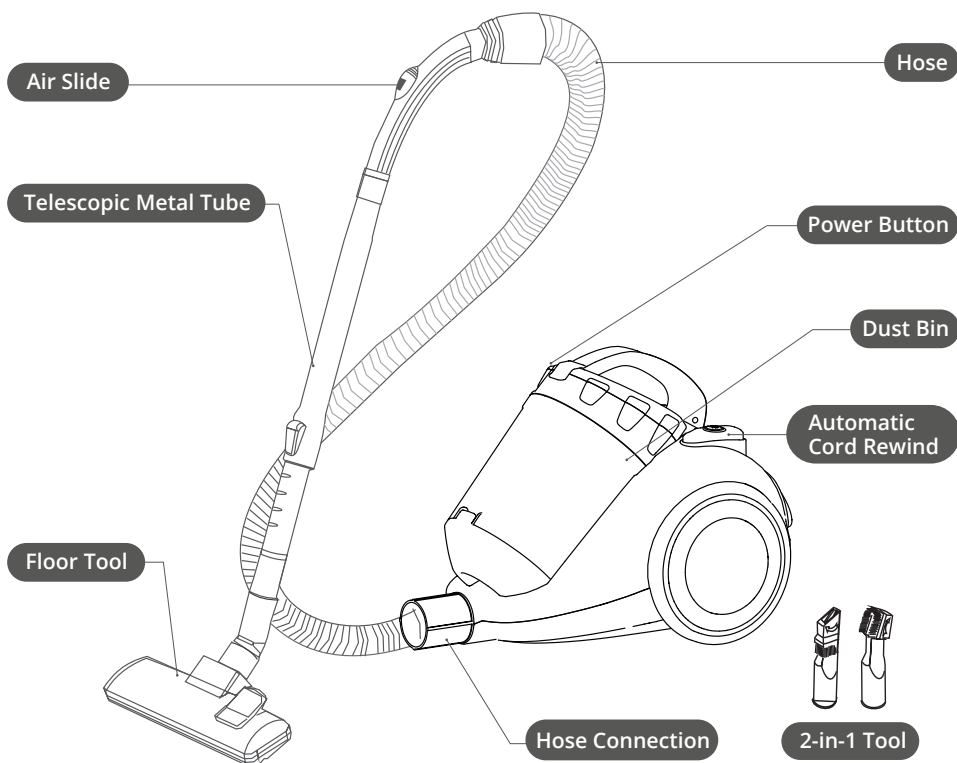

SPARE PARTS

Floor tool

Part no. DVLS00052

Metal telescopic tool

Part no. DVLS00053

Visit dirtdevil.co.uk to order

2-in-1 tool

Part no. DVLS00058

Hose

Part no. DVLS00078

HEPA post-motor filter

Part no. DVLS00081

HEPA pre-motor filter

 
Part no. DVLS00083




ASSEMBLING YOUR VACUUM CLEANER

ASSEMBLING YOUR VACUUM CLEANER


Always unplug your appliance from the wall socket before assembling or removing accessories.

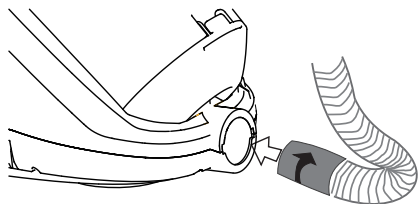

1. Attach the hose into the hose connection.

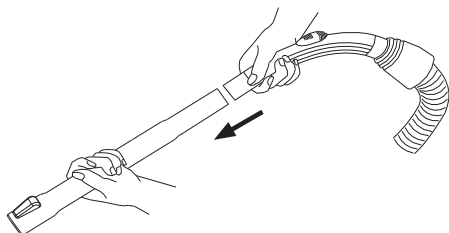 

 2. Fit the telescopic tube to the curved hose extension.

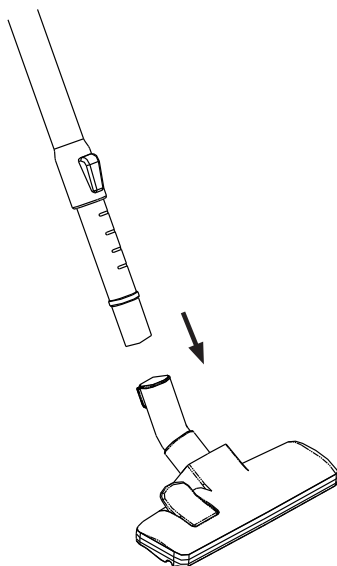


3. Push the other end of the telescopic tube into the floor tool. Adjust the telescopic tube to the desired length.

CARRYING AND MOVING THE APPLIANCE


There is a handle on the top of the vacuum cleaner which you can use to conveniently carry it.

 HANDLE →

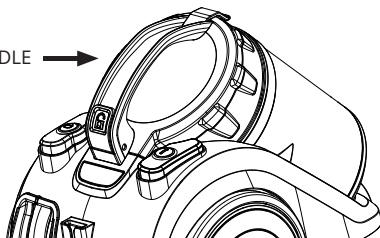


USING YOUR VACUUM CLEANER

 
USING YOUR VACUUM CLEANER

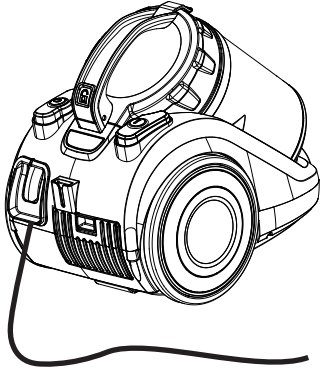

 
1. Once all attachments are in place, unwind a sufficient length of cable. A yellow mark on the cord shows the ideal cable length. Do not pull the cord beyond the red mark.

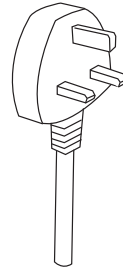

 2. Insert the power plug into the wall outlet.

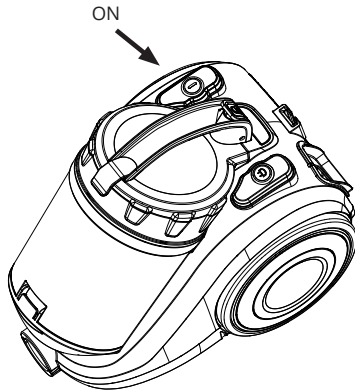

 3. Press the power button located on the main body of the appliance to turn the vacuum cleaner on.

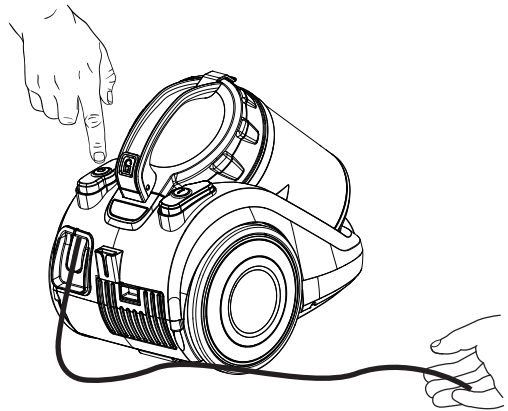

4. To rewind the power cord once you have finished cleaning, press the cord rewind button with one hand and guide the power cord with the other hand to ensure that it does not whip causing damage or injury.

 
MAINTAINING YOUR VACUUM CLEANER

CLEANING THE DUST BIN

WARNING


Always unplug the appliance from the wall socket before removing the dust bin or cleaning the filters.

1. Press the knob on the dust bin handle.
2. Lift the dust bin up and out as shown in figure 1.
3. Press the knob on the lower end of the dust bin to open the bottom cover as shown in figure 2. Empty the dirt.
4. Twist the dust cup and dust bin cover to open it as shown in figure 3.
5. Clean the plastic parts of the dust bin with a damp soft cloth if necessary. Wait until fully dry to reassemble the vacuum cleaner.

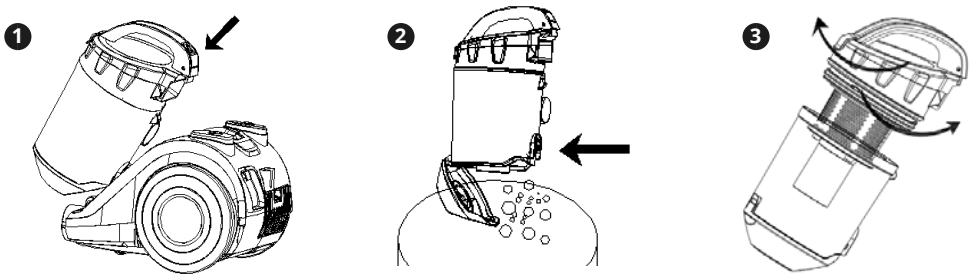

REMOVING THE HEPA PRE-MOTOR FILTER

 
1. Remove the dust bin from the vacuum cleaner.
2. Press the knob on the dust bin handle.
3. Lift up the dust bin up and out.
4. Lift up the dust bin upper cover button.
5. Open the dust bin upper cover.
6. Remove the filter located behind the bin to clean or change it. The HEPA pre-motor filter comes in two parts. Follow the cleaning instructions on page 9 to clean the filters.

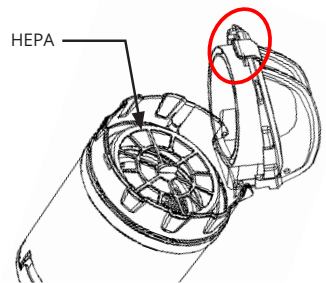


NOTE: Pay attention to where each part of the filter is situated in the dust bin so you can replace both parts correctly.

MAINTAINING YOUR VACUUM CLEANER

 REMOVING THE HEPA POST-MOTOR FILTER

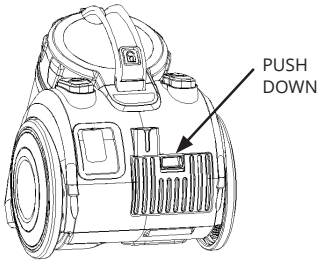

 1. Press the air outlet grid knob to open.

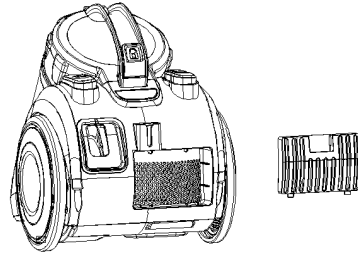

2. Remove the HEPA post-motor filter to clean or change it. Follow the cleaning instructions below to clean the filter.

CLEANING THE HEPA PRE-MOTOR AND POST-MOTOR FILTERS

The filters in the vacuum cleaner will become dusty over time. This is normal and will not affect their performance. However, if the filters become so dusty that suction power is reduced:

1. Remove the filters.
2. Rinse the filters under the tap.
3. Allow the filters to air dry for 24 hours. (Do not use a heater, fire, hairdryer or other high-temperature appliance to dry the filters.)

4. Refit the filters into the vacuum.

This should be done once every six months or when suction appears to be reduced.

IMPORTANT

All filters should be checked regularly for signs of damage, preferably after each cleaning task. The filters must be replaced immediately if they become damaged.

REMOVING OBSTRUCTIONS

The suction hole must be open and free of any obstructions at all times. Otherwise, the motor will overheat and could become damaged.

IMPORTANT

Please note that there is a safety valve inside the vacuum to prevent the unit from being run with a high vacuum rate. If the vacuum rate is too high, the safety valve will be turned on to protect the motor from being broken.

TROUBLESHOOTING

WARNING: To reduce the risk of shock and unintended operation, turn off and unplug before servicing.

Problem	Possible Issue	Solution
Loss of suction	Dust bin full	Empty the dust bin. See “Cleaning the dust bin” section for more information.
Loss of suction	Dirty filters or blockage	<ol style="list-style-type: none">1. Empty the dust bin and clean the filters. See “Removing the HEPA pre-motor filter”, “Removing the centric HEPA filter”, “Removing the HEPA post-motor filter” and “Cleaning the filter” sections for more information.2. Check for blockages in the floor tool, hose, metal telescopic tube and connectors.3. Remove any blockages before restarting the vacuum cleaner.

CONTACT US

In any other case or if the solution explained above did not solve the problem, please contact us at info@dirdevil.co.uk

DISPOSAL

Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your local authority for recycling advice.

UNBOXING

During transportation, packaging was used to protect the appliance against any damage. After unboxing, please dispose of all packaging in a way that will not cause damage to the environment.

IMPORTANT! During unpacking, keep the packaging material (polyethylene bags, polystyrene pieces, etc.) out of reach of children.

SPECIFICATION

Model	CY08
Power	700W
Capacity	1.2L
Weight	3.3kg
Hose length	1.5m
Cord length	4.5m
Sound	79dB
Dimensions (LxWxH)	32 x 22 x 27cm
Filter type	HEPA
Input voltage	220-240V
Current	50Hz

WARNING: The above data has been supplied by the manufacturing plant and tested in laboratory conditions. The actual situation may vary according to the use environment. All product specifications are subject to change without notice.

This appliance complies with the following UK & European Directives:

Electrical Equipment (Safety) Regulations 2016

Electromagnetic Compatibility Regulations 2016

Low Voltage Directive (LVD) 2014/35/EU

Electromagnetic Compatibility Directive (EMCD) 2014/30/EU





SPARE PARTS



Replacement parts below are available for your appliance model.
Please visit dirtdevil.co.uk to place your order.

Floor tool

- Part no. DVLS00052

Metal telescopic tool

- Part no. DVLS00053

2-in-1 tool

- Part no. DVLS00058

Hose (grey)

- Part no. DVLS00078

Motor filter cover

- Part no. DVLS00080

HEPA post-motor filter

- Part no. DVLS00081

Cable with plug

- Part no. DVLS00082

HEPA pre-motor filter

- Part no. DVLS00083

Front wheel

- Part no. DVLS00084

Wheel (pair)

- Part no. DVLS00085

Dust bin

- Part no. DVLS00086

Cyclone

- Part no. DVLS00087

VISIT DIRT DEVIL WEBSITE

www.dirtdevil.co.uk

CONTACT US

0333 400 0653

info@dirtdevil.co.uk

Connect House,
Small Heath Business Park, Talbot Way,
Small Heath, Birmingham,
B10 0HJ
United Kingdom

This appliance has a 1-year warranty as standard. To extend your warranty for 1 additional year, please visit dirtdevil.co.uk and register your appliance.

Pictures are for illustration purposes only and may differ from the actual product. We are constantly striving to improve our products and the specifications contained herein are subject to change without notice. Made in China. DIRT DEVIL is a registered trademark of Techtronic Cordless GP and is used under licence by Connect Distribution Services Ltd.

Dirt Devil shall not be held liable for any damage caused by improper use of the product.