




# USER MANUAL

## SWIVEL HEAD STEAM MOP

SM10

 USER MANUAL

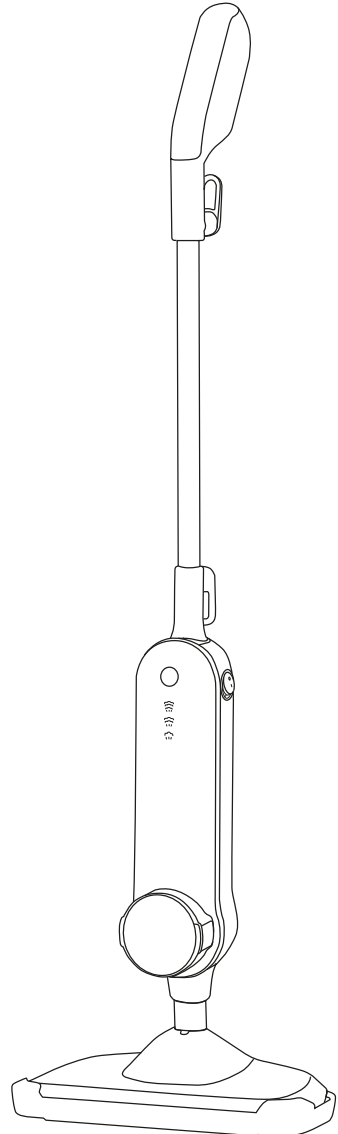

DIRTDEVIL.CO.UK

0333 400 0653

# WELCOME!

Congratulations on your purchase. Use this user manual to learn about your new steam mop's great features. Find out how to assemble, use and maintain your steam mop in this easy to follow manual.

## PLEASE READ CAREFULLY AND KEEP FOR FUTURE REFERENCE

If you have any questions, please email [info@dirtdevil.co.uk](mailto:info@dirtdevil.co.uk) to get in contact.

# CONTENTS

---

<b>Safety instructions .....</b>	<b>3</b>
<b>Getting to know your Dirt Devil steam mop .....</b>	<b>6</b>
<b>Assembling your steam mop .....</b>	<b>7</b>
<b>Using your steam mop.....</b>	<b>9</b>
Filling the water tank	
Using the steam control	
Attaching the microfibre mop pad	
Cleaning hard floors	
Cleaning carpets	
Turning off your steam mop	
<b>Maintaining your steam mop .....</b>	<b>11</b>
<b>Troubleshooting .....</b>	<b>12</b>
<b>Specification .....</b>	<b>13</b>
<b>Parts list and contact details .....</b>	<b>16</b>

# IMPORTANT SAFETY INSTRUCTIONS

## FOR INDOOR USE ONLY

---



**WARNING:** Danger of scalding

### **WARNING**

When using an electrical appliance, basic precautions should always be followed.

### **READ ALL INSTRUCTIONS BEFORE USING THIS APPLIANCE**

Failure to follow the warnings and instructions may result in electric shock, fire and/or serious injury.

## **USING THE STEAM CLEANER**

- **DO NOT** use the steam mop outdoors. For household use only. Store indoors.
- **DO NOT** leave steam mop unattended.
- **DO NOT** immerse in liquid.
- **DO NOT** use this steam mop if it has been dropped, damaged, left outdoors, submerged in water or is not working as it should..
- **DO NOT** use the steam mop in an enclosed space filled with explosive, toxic or flammable vapours.
- Always vacuum your carpets thoroughly and ensure hard floor areas are free from grit and debris before using your steam mop.
- The steam mop should not be used to clean electrical appliances, sockets, components or wires.
- Liquid or steam should not be directed towards electrical equipment.
- **DO NOT** attempt to remove blockages with sharp objects as this may cause damage to the steam mop.
- Filling the tank with hot or boiling water will damage the steam mop and invalidate the warranty.
- Unplug the steam mop immediately if it malfunctions.
- Before storing the steam mop, make sure the tank is empty and clean.
- **DO NOT** leave the steam mop turned on or connected to the mains when unattended.

# IMPORTANT SAFETY INSTRUCTIONS

## FOR INDOOR USE ONLY

---

### SUITABILITY

- **DO NOT** use on wax polished floors or furniture, acrylic surfaces and synthetic, velvet or steam/water-sensitive materials.
- Before using on a floor or surface, refer to the surface manufacturer's care recommendations. If the surface is suitable for steam cleaning, test for damage on a small hidden area. If no distortion, discolouration or damage occurs, continue cleaning.
- **DO NOT** put descaling, aromatic, alcoholic or detergent products into the steam mop, as this may damage it or make it unsafe for use. Always fill the tank with cold water only.

### PLUG AND CORD

- Switch off and unplug the steam cleaner at the socket when not in use and before conducting maintenance or troubleshooting.
- **DO NOT** use with a damaged cord or plug.
- **DO NOT** pick up or pull the steam mop by the cord. Always carry the steam mop by the handle.

- Take care that the cord is not kinked, pinched, pulled around sharp corners or run over.
- Ensure the cord does not come into contact with heat sources or become a trip hazard.
- When unplugging the steam mop from the wall socket, pull by the plug, not the cord, holding the socket with your other hand.
- **DO NOT** use if the power cord is damaged.
- Turn off all controls on the steam mop before disconnecting or connecting the power cord. After use, always wrap the power cord around the cord latches provided.

### USING ATTACHMENTS

- Always turn off and unplug the steam mop before changing attachments.
- Always make sure the tank and attachments are fitted correctly before using the steam mop.
- Use genuine Dirt Devil attachments only. Using non-genuine attachments may cause damage to the steam mop.

# IMPORTANT SAFETY INSTRUCTIONS

## FOR INDOOR USE ONLY

---

### PERSONAL SAFETY

- **DO NOT** expose hair, loose clothing, fingers or body parts to openings or moving parts.
- **DO NOT** aim the steam mop at people and animals.
- Never touch the steam jet or mop head from a short distance as there is a risk of scalding.
- **DO NOT** touch any hot areas or attachments on your steam mop. It's normal for the steam mop and attachments to heat up during use. Always allow them to cool down before handling.
- **DO NOT** handle steam mop with wet hands.
- This machine is not intended to be used or cleaned by persons with reduced physical, sensory or mental capabilities, or lack of experience or knowledge, unless they have been given instructions concerning the machine by a person legally responsible for their safety. They should be supervised whilst using the machine. Children shall not use, clean or play with this machine, which when not in use should be secured out of their reach. Keep the vacuum cleaner out of

reach of children. Packing material must not be used for playing. There is a danger of suffocation.

- **DO NOT** use the steam mop to clean or refresh any items of clothing that are still being worn on the body.
- Take extra care when cleaning on the stairs.


### USER MANUAL GUIDANCE

- Keep this user manual in a safe place.
- Failure to comply with this user manual can lead to serious injuries or damage to the steam mop. We take no responsibility for damage due to failure to comply with this user manual.

# GETTING TO KNOW YOUR STEAM MOP

 **WARNING:** Danger of scalding

## FEATURES

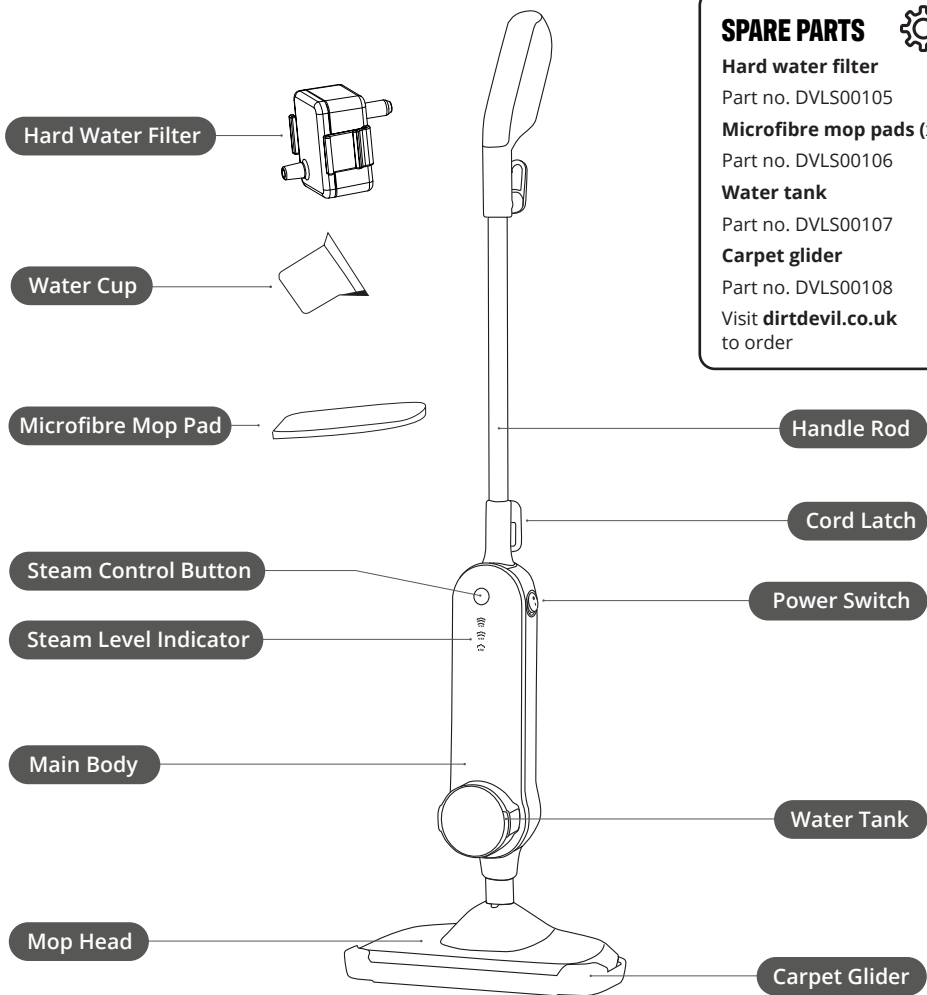

# ASSEMBLING YOUR STEAM MOP



**WARNING:** Danger of scalding

## ASSEMBLING YOUR STEAM MOP


### CAUTION

The steam cleaner and accessories get very hot during use. Always allow them to cool down before handling.


Before assembling or disassembling attachments and accessories, emptying the tank or changing the microfibre mop pad, ensure the steam cleaner is not plugged into the mains supply and is switched off.

Your steam mop assembles quickly and easily. It is packaged with the following items:


1. Handle
2. Main Body
3. Mop Head

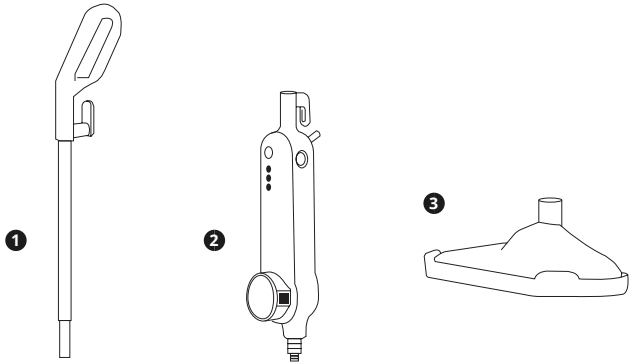


## TO ASSEMBLE YOUR STEAM MOP:

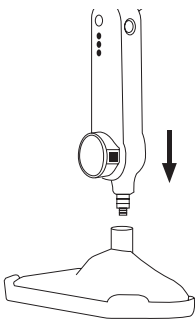

**1.** Attach the main body to the mop head by snapping it into place.

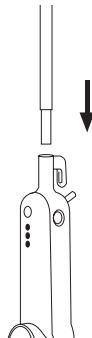

**2.** Insert the handle into the main body until it locks into the right place.

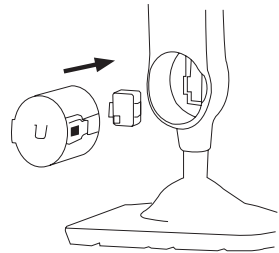

**3.** Install the water tank into the main body.

Steam mop assembly is now complete. Thoroughly sweep or vacuum the floor before cleaning with the steam mop.


# USING YOUR STEAM MOP




**WARNING:** Danger of scalding

## FILLING THE WATER TANK


The removable water tank is located at the bottom of the main body. Filtered water is recommended in place of tap water. To fill your steam mop:

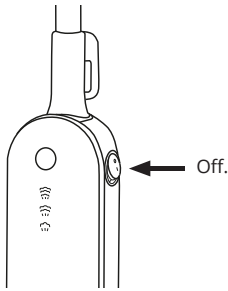


**1.** Ensure the steam mop is turned off.

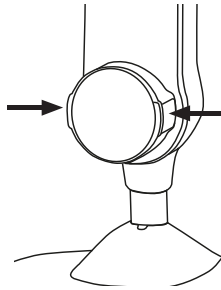


**2.** Press the buttons on both sides of the water tank and pull it out.

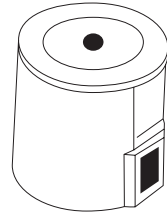

**3.** Pull out the rubber plug on the back of the tank.

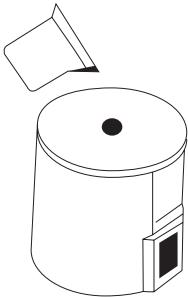

**4.** Fill the water tank with the water cup. For best results, water should be at room temperature.

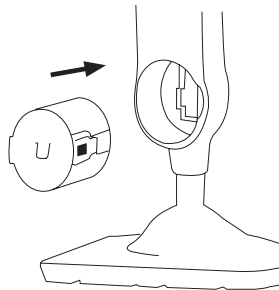

**5.** Replace the water tank and gently slide it into place.

When the steam mop stops emitting steam, unplug the unit. Simply remove the water tank, refill and continue steaming.

**NOTE:** Upon first use of the steam mop or first use after refilling the water tank, the pump may make a “knocking” sound. This is normal and should only last a few seconds.



# USING YOUR STEAM MOP




**WARNING:** Danger of scalding

## USING THE STEAM CONTROL



Power Switch

1. Press the power switch.

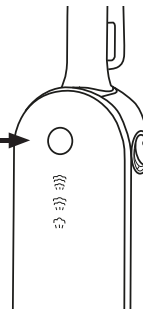

Steam Control

2. Press the steam control button to choose the level of steam you desire. Please note that when you first press the steam control button, the steam is at its maximum level.

3. The steam level indicator light will stop blinking when the steam mop is ready to use.


## ATTACHING THE MICROFIBRE MOP PAD

The reusable microfibre mop pads are machine washable and safe for virtually all hard floor surfaces.

The microfibre mop pad may already be attached to the mop head when you unbox your steam mop. If not:

1. Place the microfibre mop pad on the floor, velcro side up. Place the steam mop onto the pad and attach the pad to the velcro at the bottom of the mop head. Make sure the pad covers the entire base of the mop head.
2. If you are refreshing carpets, once you have attached the microfibre mop pad, hook the steam mop into the front of the carpet glider and push to clip in place.

**NOTE:** To ensure the floor is disinfected, use the microfibre mop pad and wipe the steam mop back and forth at least three times with continuous steam. For best results, remove the microfibre mop pad and clean it after each use.

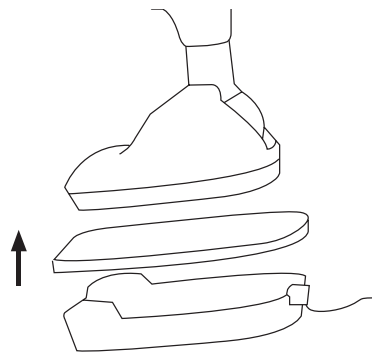

# USING YOUR STEAM MOP

---



**WARNING:** Danger of scalding

## CLEANING HARD FLOORS

Your steam mop is designed to clean hard floors such as ceramic, tile, vinyl, laminate, marble, stone and sealed hardwood floors. Use of your steam mop on waxed or some unwaxed floors may result in diminished glossiness. Test the steam mop in an inconspicuous area and check the care instructions from your flooring manufacturer before use.

1. Plug the unit in and wait 30 seconds for it to heat up.
2. Choose the level of steam to clean your floor. The lowest steam level is ideal for delicate floors, the medium level is best suited to regular cleaning and the highest steam level allows you to clean durable floors or sticky messes.
3. Begin cleaning by slowly passing the unit over the floor surface.

## CLEANING CARPETS

The carpet glider accessory attaches to the steam mop to allow it to slide over the carpet and clean it.

Please make sure that the carpet glider has been securely buckled onto the floor head. If it is not in the correct position, the carpet glider will fall off during cleaning.

**NOTE:** Move the steam mop in a continuous motion until you are finished. **DO NOT** leave the mop in a stationary position

## TURNING OFF YOUR STEAM MOP


To turn off the steam mop, continue to press the steam control button until the blue light above it is illuminated.

# MAINTAINING YOUR STEAM MOP




**WARNING:** Danger of scalding


## STORING YOUR STEAM MOP

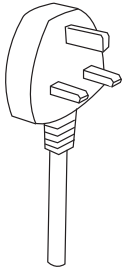

**1.** Unplug the power cord from the socket.

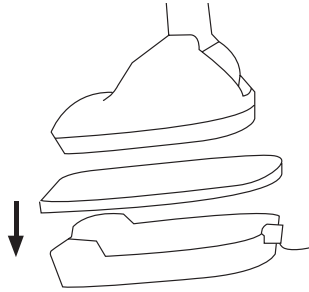


**2.** Carefully remove the microfibre mop pad from the mop head. The microfibre mop pad and lower assembly may be hot.

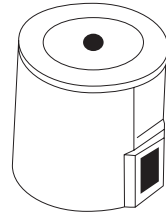


**3.** Any water remaining in the water tank should be emptied before storing.



**4.** The microfibre mop pad can be machine washed in warm water. Use only liquid detergents. Do not use fabric softeners or bleach. For best results, air dry.

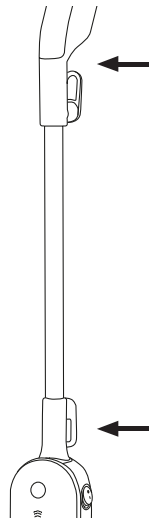

**5.** Wrap the power cord around the latches on the back of the steam mop.

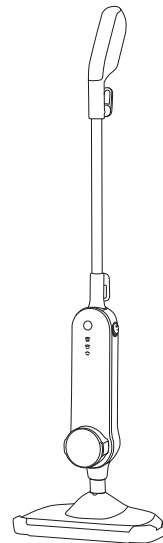

**6.** Wipe all surfaces of the steam mop with a soft cloth. Store upright in a protected, dry area.

# TROUBLESHOOTING

---

**WARNING:** To reduce the risk of electric shock, burns or unintended operation, turn off the power, unplug from the mains and allow the appliance to fully cool down before servicing.

Problem	Possible issue	Solution
Reduced steam or no steam	Water tank empty	Fill tank
Reduced steam or no steam	Steam level not selected	Select steam level by pushing the steam control button

In any other case or if the solution explained above did not solve the problem, please contact us at [info@dirdevil.co.uk](mailto:info@dirdevil.co.uk).

**This appliance complies with the following UK & European Directives:**

Electrical Equipment (Safety) Regulations 2016

Electromagnetic Compatibility Regulations 2016

Low Voltage Directive (LVD) 2014/35/EU

Electromagnetic Compatibility Directive (EMCD) 2014/30/EU

# SPECIFICATION

---

Model	SM10
Power	1300W
Capacity	330ml
Weight	2.3kg
Cord length	5m
Dimensions (LxWxH)	31.9 x 21 x 115.8cm
Filter type	Hard water filter
Steam time	14min
Steam rate	20g/min
Heat-up time	30s
Input voltage	220-240V
Current	50Hz

**WARNING:** The above data has been supplied by the manufacturing plant and tested in laboratory conditions. The actual situation may vary according to the use environment. All product specifications are subject to change without notice.

## DISPOSAL

Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your local authority for recycling advice.

## UNBOXING

During transportation, packaging was used to protect the appliance against any damage. After unboxing, please dispose of all packaging in a way that will not cause damage to the environment.

**IMPORTANT!** During unboxing, keep the packaging materials (polyethylene bags, polystyrene pieces, etc.) out of reach of children.









## SPARE PARTS



Replacement parts below are available for your appliance model.  
Please visit [dirtdevil.co.uk](http://dirtdevil.co.uk) to place your order.

### Top handle with screw

- Part no. DVLS00102

### Cord with plug

- Part no. DVLS00103

### Handle rod

- Part no. DVLS00104

### Hard water filter

- Part no. DVLS00105

### Microfibre mop pads (x2)

- Part no. DVLS00106

### Water tank

- Part no. DVLS00107

### Carpet glider

- Part no. DVLS00108

### Top cord latch with screw

- Part no. DVLS00109

## VISIT DIRT DEVIL WEBSITE

[www.dirtdevil.co.uk](http://www.dirtdevil.co.uk)

## CONTACT US

0333 400 0653

[info@dirtdevil.co.uk](mailto:info@dirtdevil.co.uk)

Connect House,  
Small Heath Business Park, Talbot Way,  
Small Heath, Birmingham,  
B10 0HJ  
United Kingdom

**This appliance has a 1-year warranty as standard. To extend your warranty for 1 additional year, please visit [dirtdevil.co.uk](http://dirtdevil.co.uk) and register your appliance.**

Pictures are for illustration purposes only and may differ from the actual product. We are constantly striving to improve our products and the specifications contained herein are subject to change without notice. Made in China. DIRT DEVIL is a registered trademark of Techtronic Cordless GP and is used under licence by Connect Distribution Services Ltd.

Dirt Devil shall not be held liable for any damage caused by improper use of the product.